


Dear clients, Thank you for buying our product.
Please read the manuel carefully before you
install the product. May you have a nice day!




IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

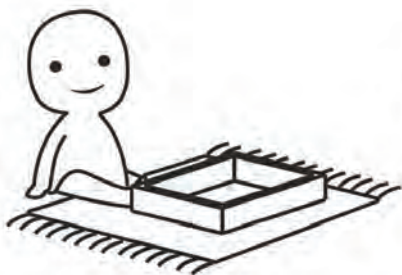


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

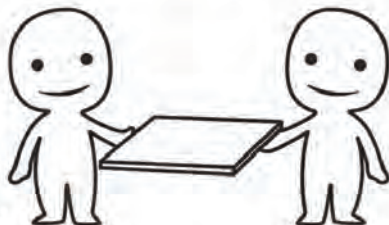

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

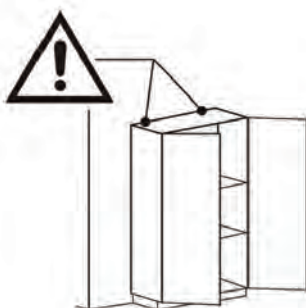

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

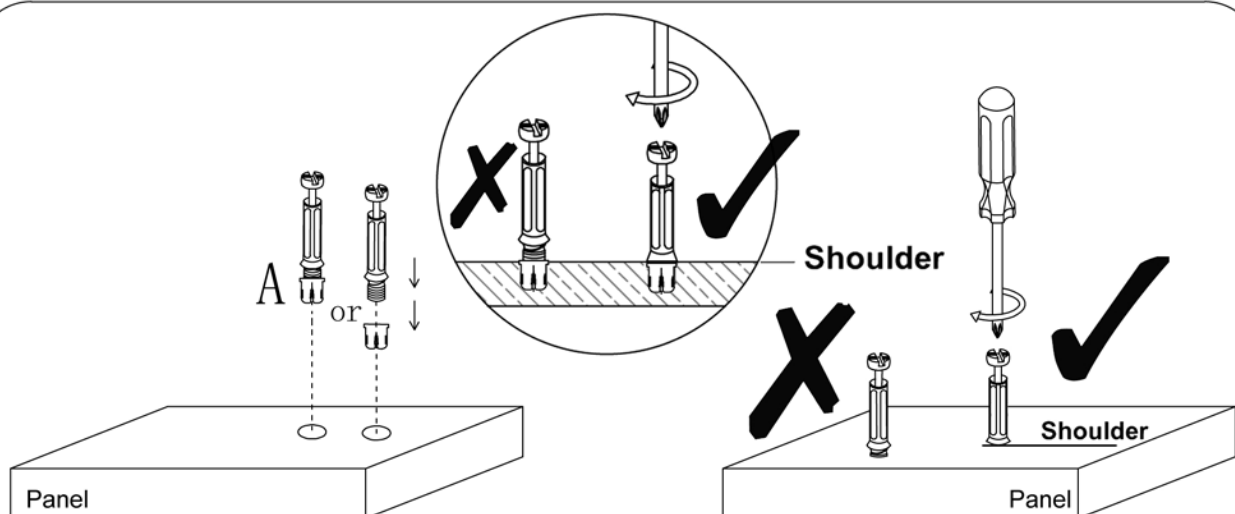


Tighten quickfit until shoulder is flush with the panel. Do not overtighten or undertighten.

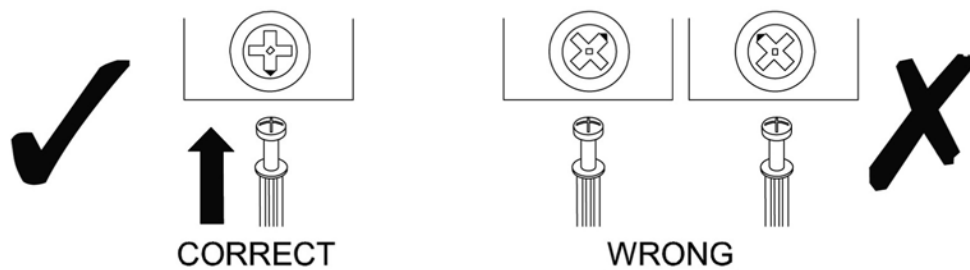


When fitting the cam lock, ensure the starting position is correct before you insert the connecting quickfit.

The quickfit head should be in the center of the cam lock when the two panels are joined. The cam lock should be inserted before the quickfit.

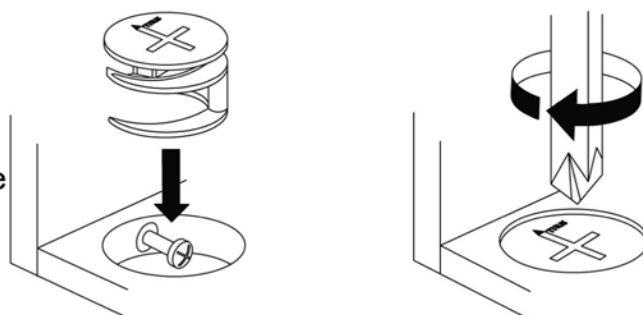

Turn the cam lock clockwise to tighten.



Parts List

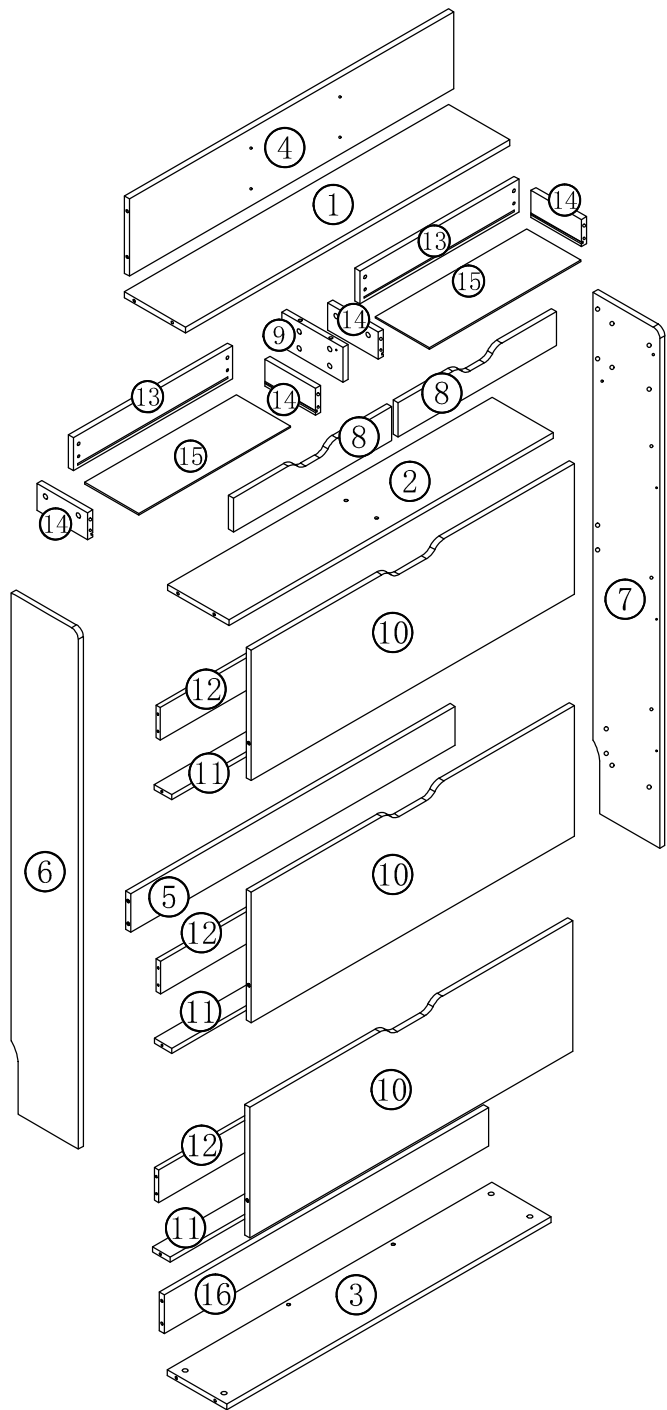

Part	Qty
①	1
②	1
③	1
④	1
⑤	1
⑥	1
⑦	1
⑧	2
⑨	1
⑩	3
⑪	3
⑫	3
⑬	2
⑭	4
⑮	2
⑯	1
	28









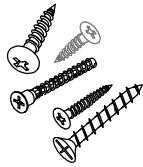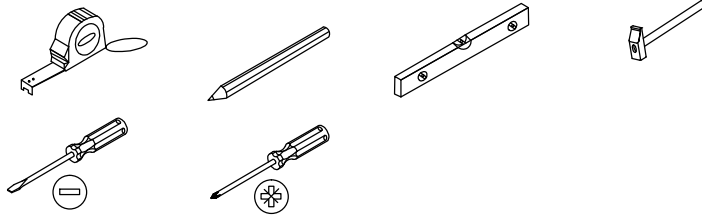


Please prepare the following tools







When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size



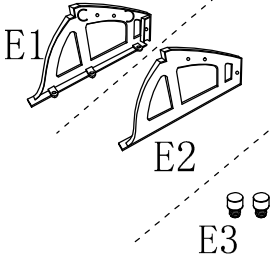
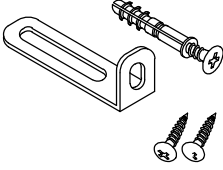
Tips: The number after "+" represents the spare hardware

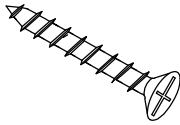 ϕ 6x40mm		 ϕ 6x30mm		 ϕ 3.5*20mm			
(A)	38+2 pcs	(B)	11+2 pcs	(C)	36+4 pcs	(D)	4 pcs
							
(E)	3 pcs	(F)	2 pcs	(G)	6 pcs	(H)	18 pcs
 3.5*35mm							
(J)	4+1 pcs						

Step1

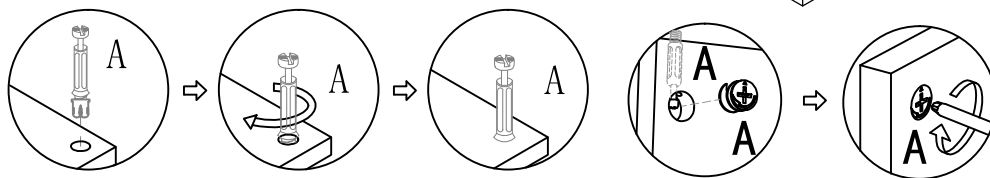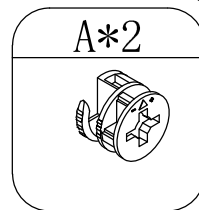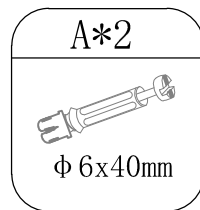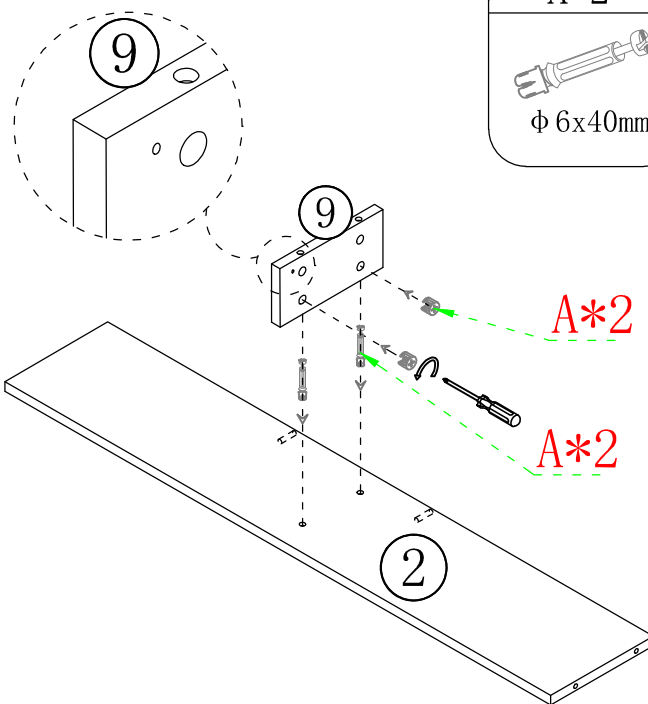


Step2

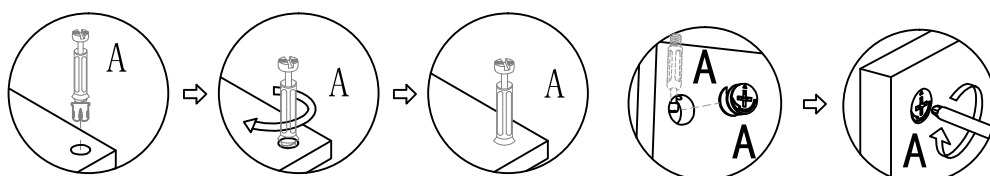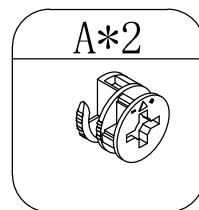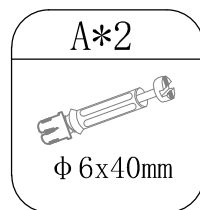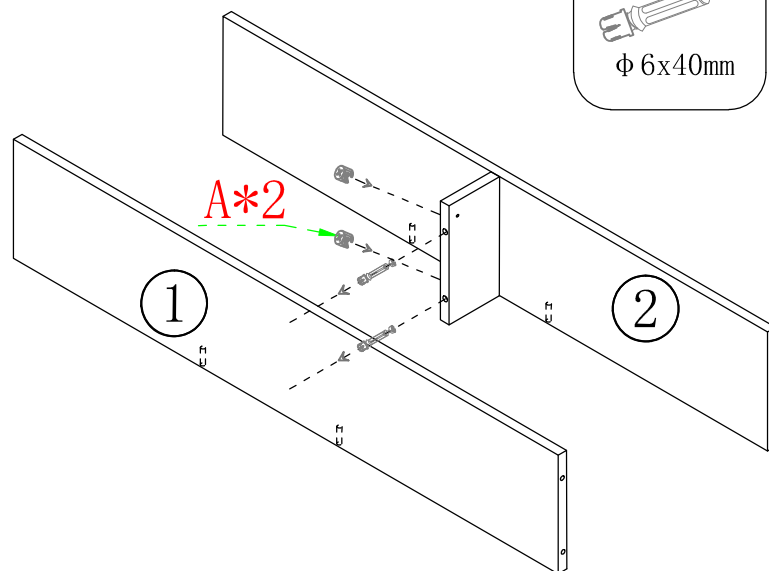








Step3

A*2




Φ 6x40mm

A*2

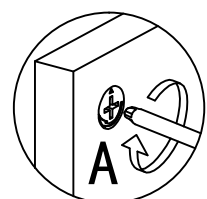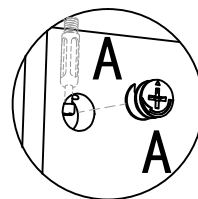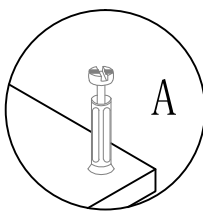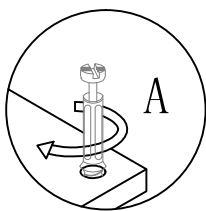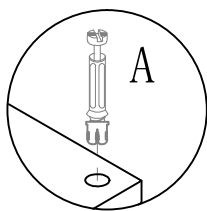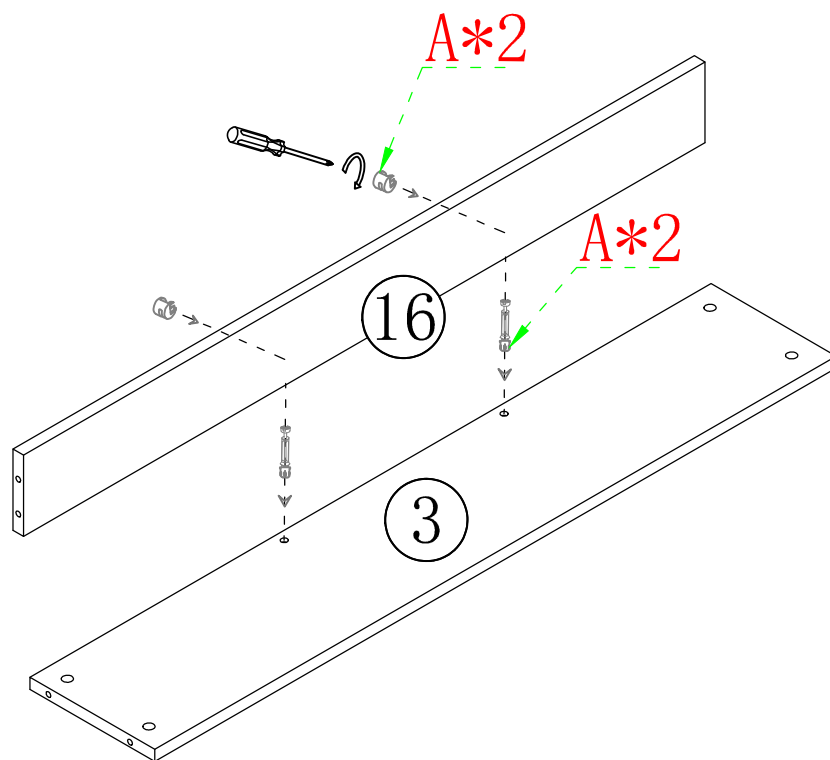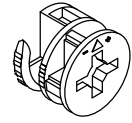




Step4

A*6




φ 6x40mm

A*6

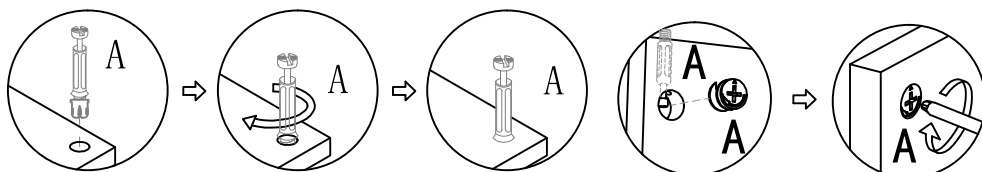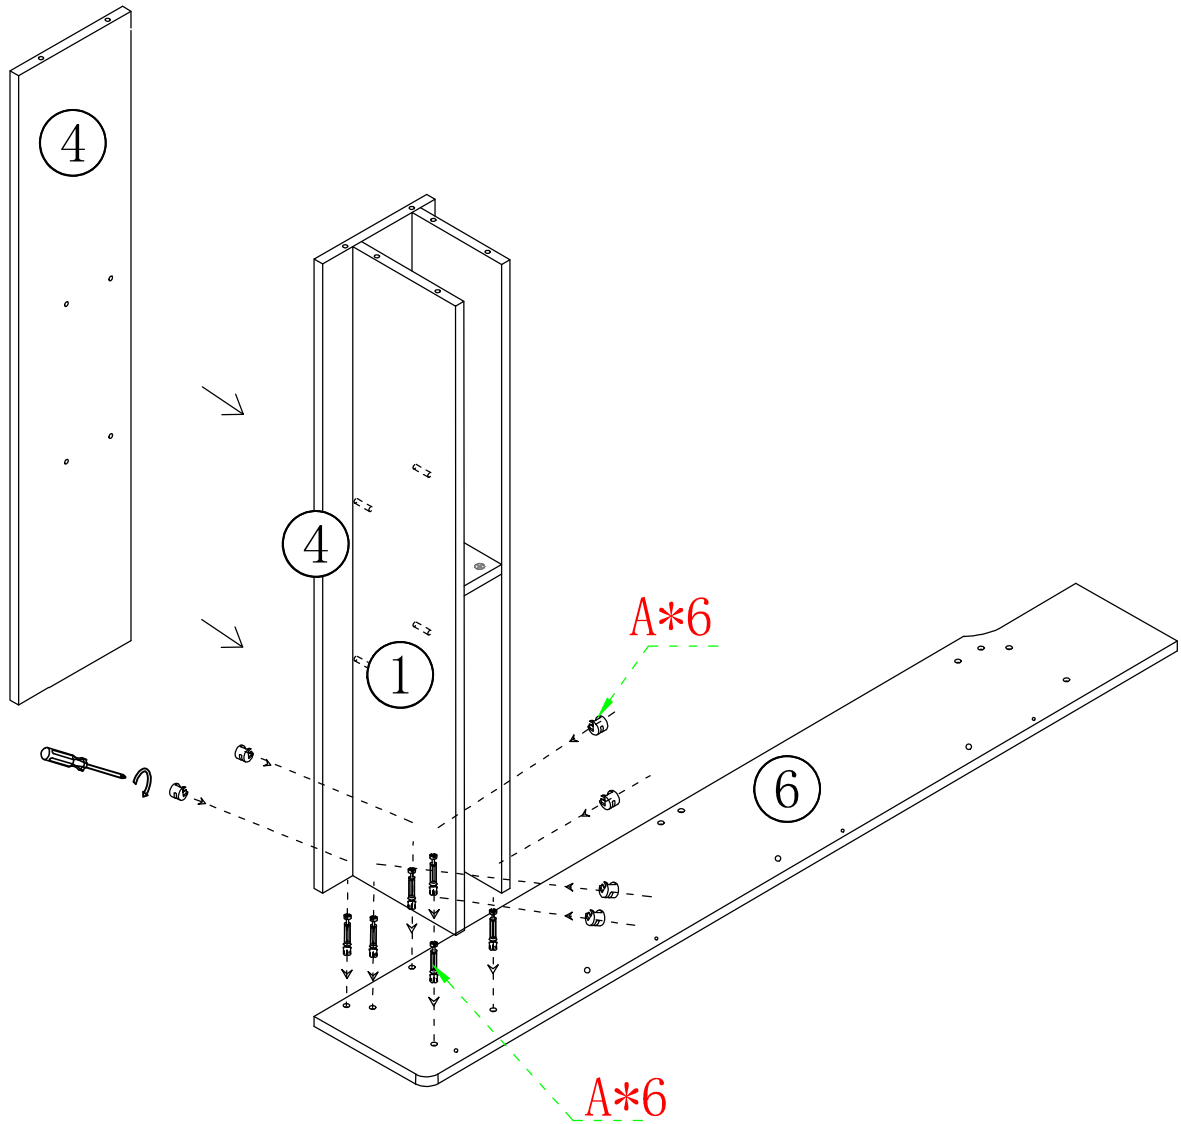




Step5

A*4




Φ 6x40mm

A*4

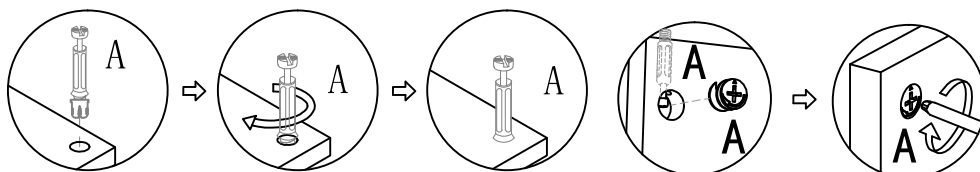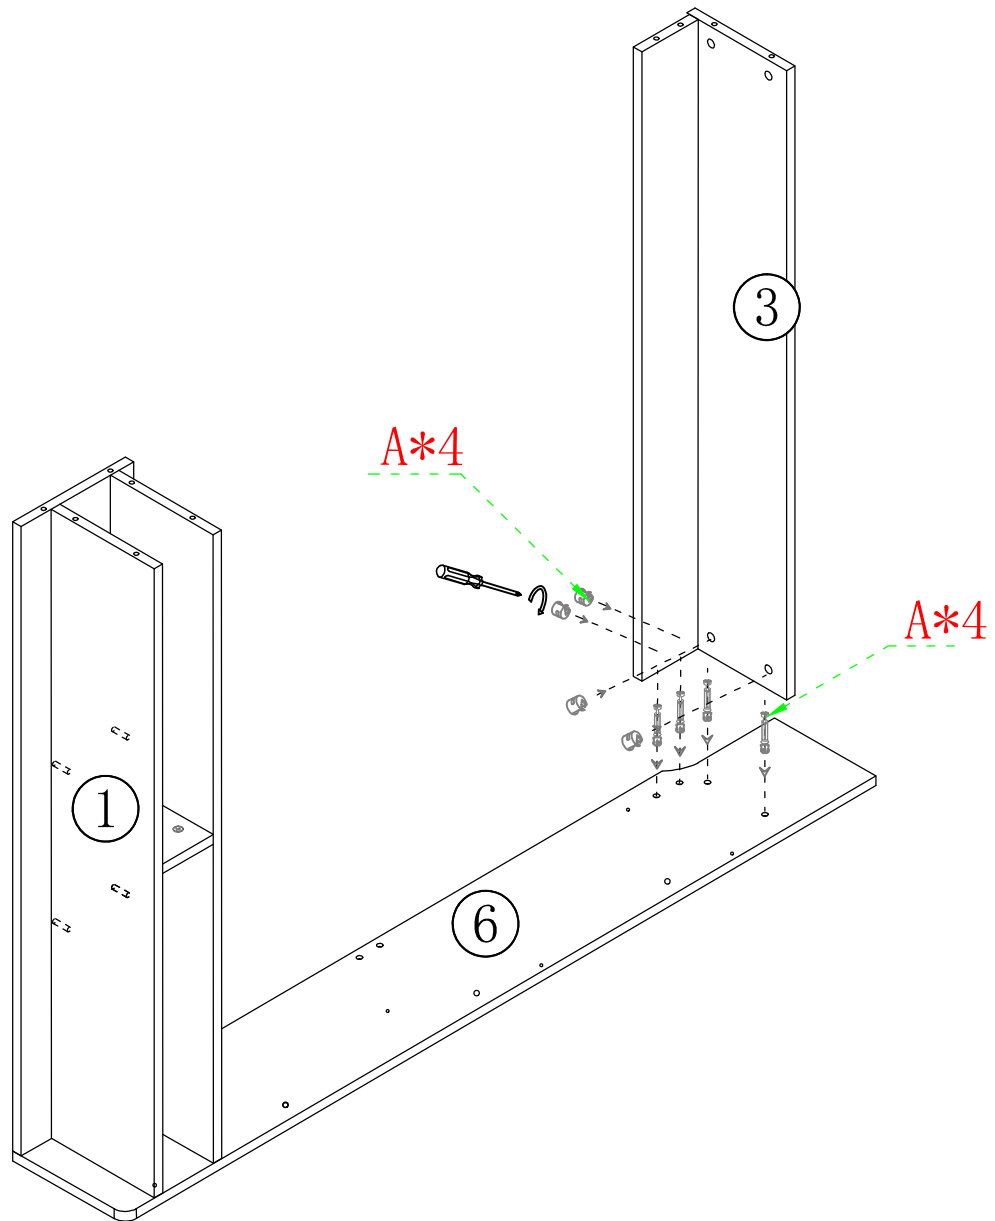


Step6

J*4






φ 3.5x35mm

A*2













φ 6x40mm


A*2

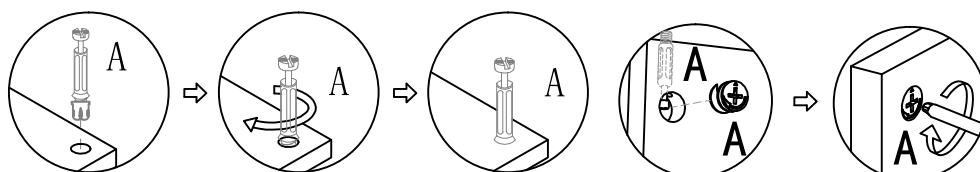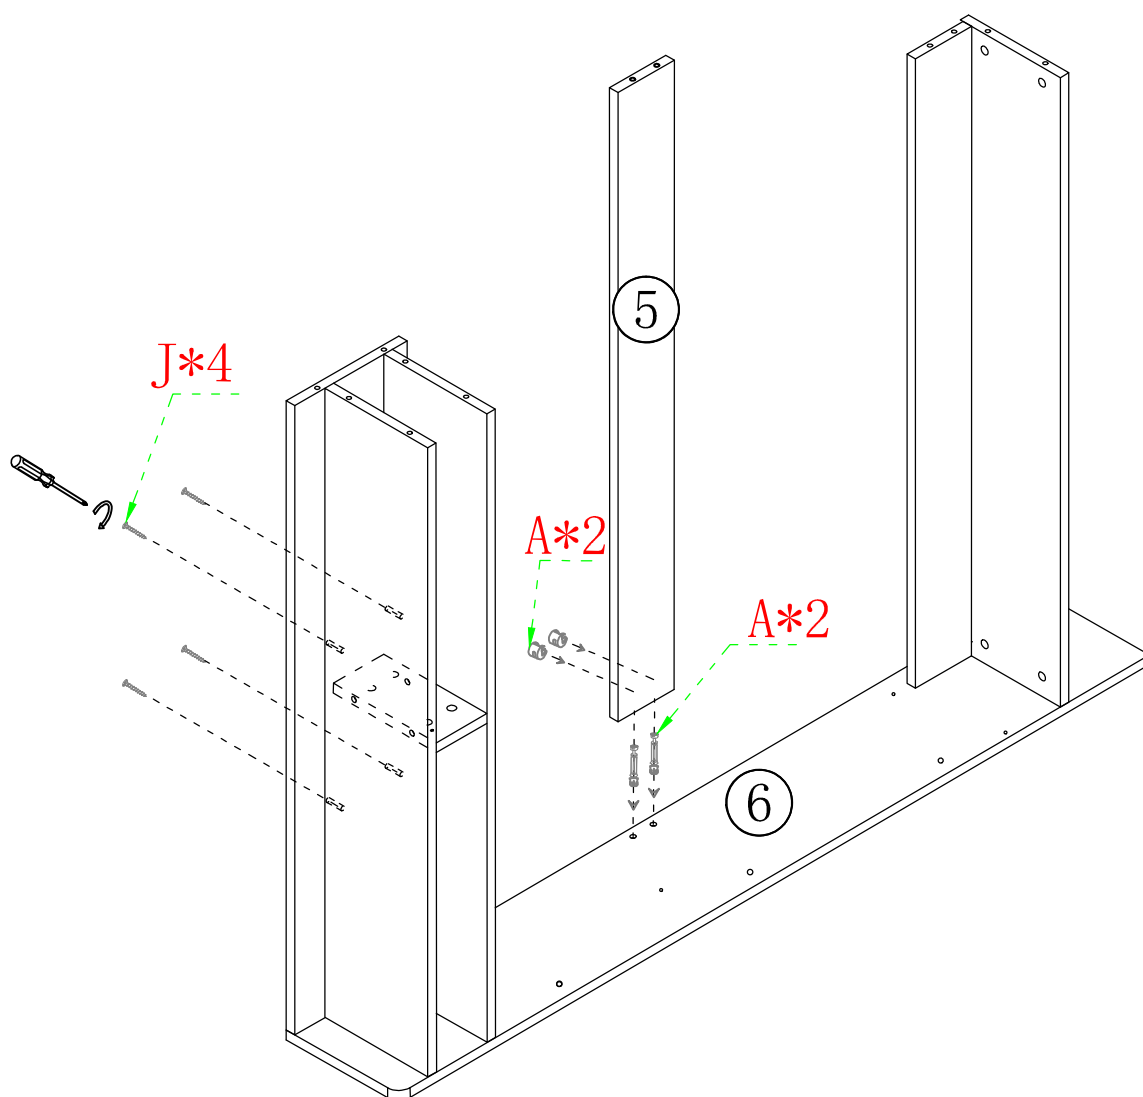



Step7

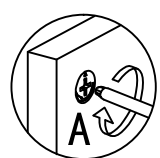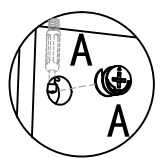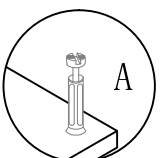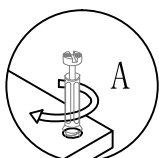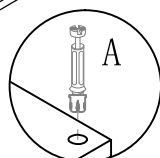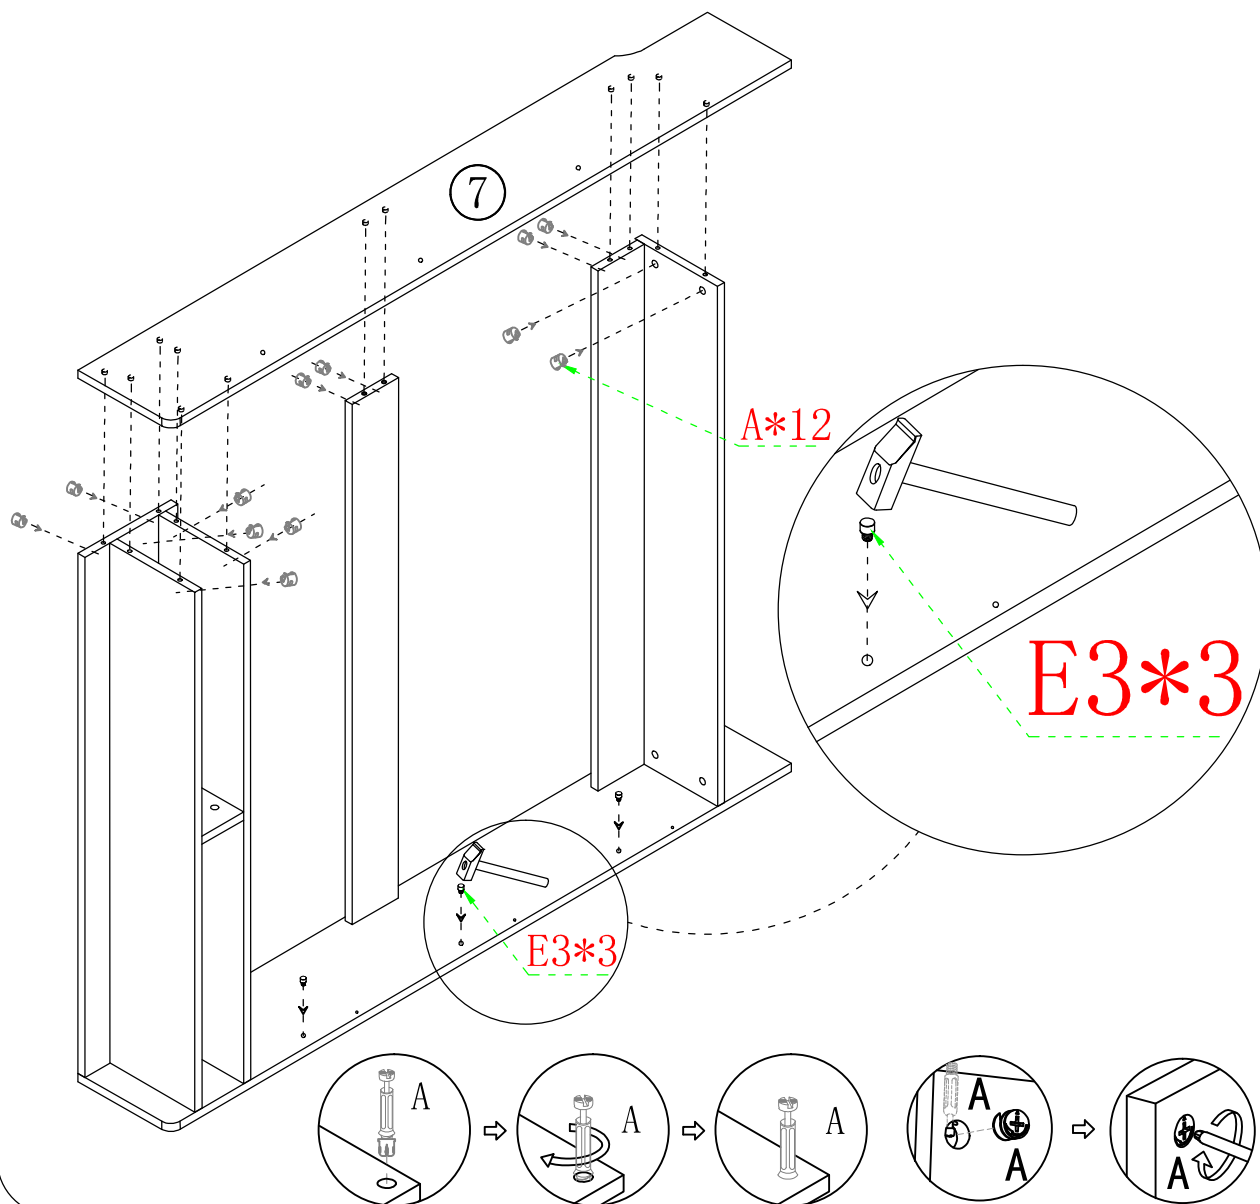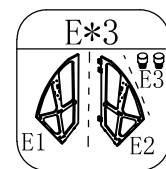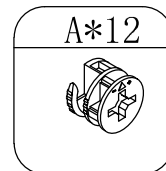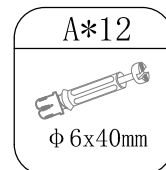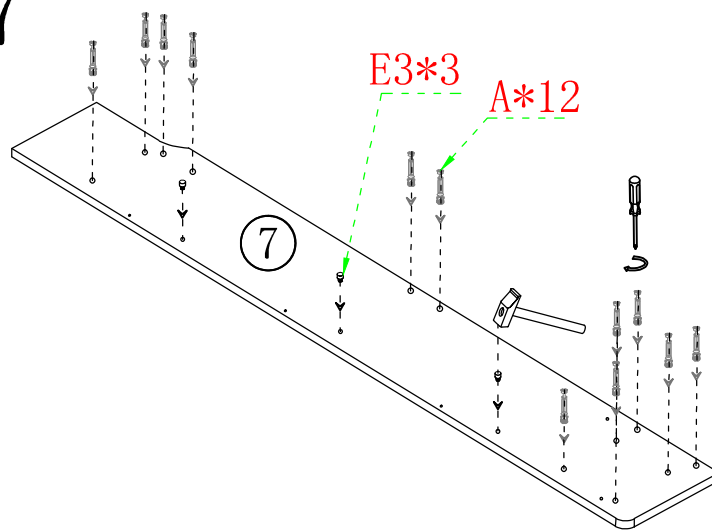


Step8

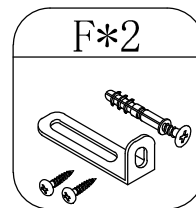


You can fix the shoe cabinet to the wall if necessary. just skip this

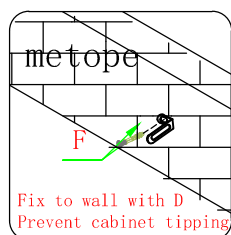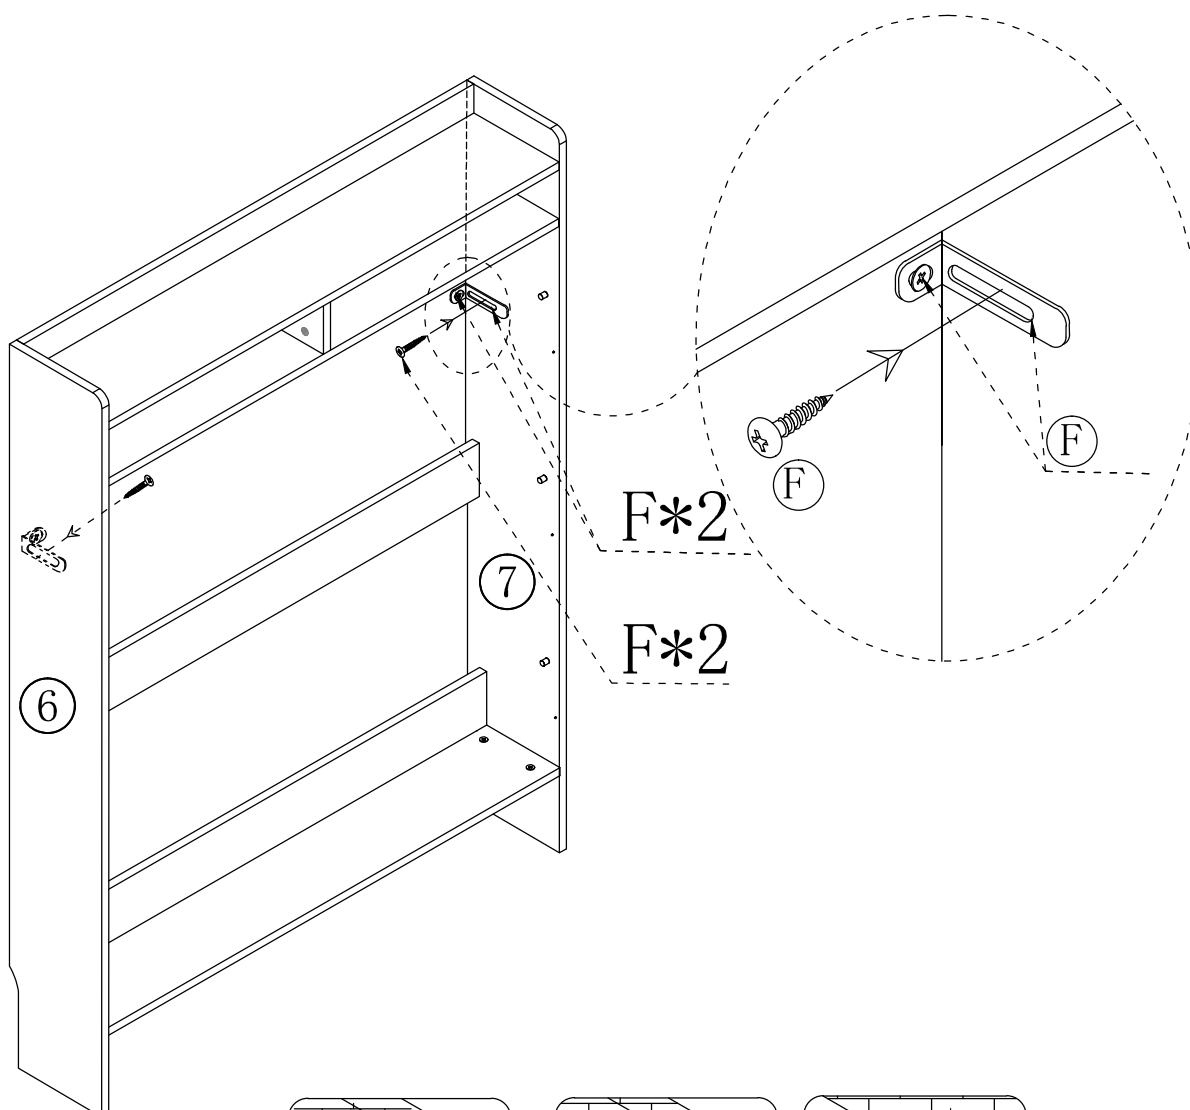

Step1

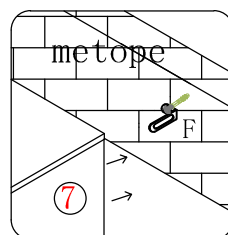


Step2

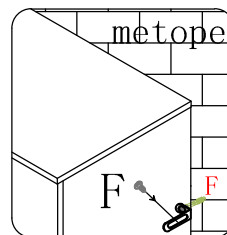

Step3

Step9

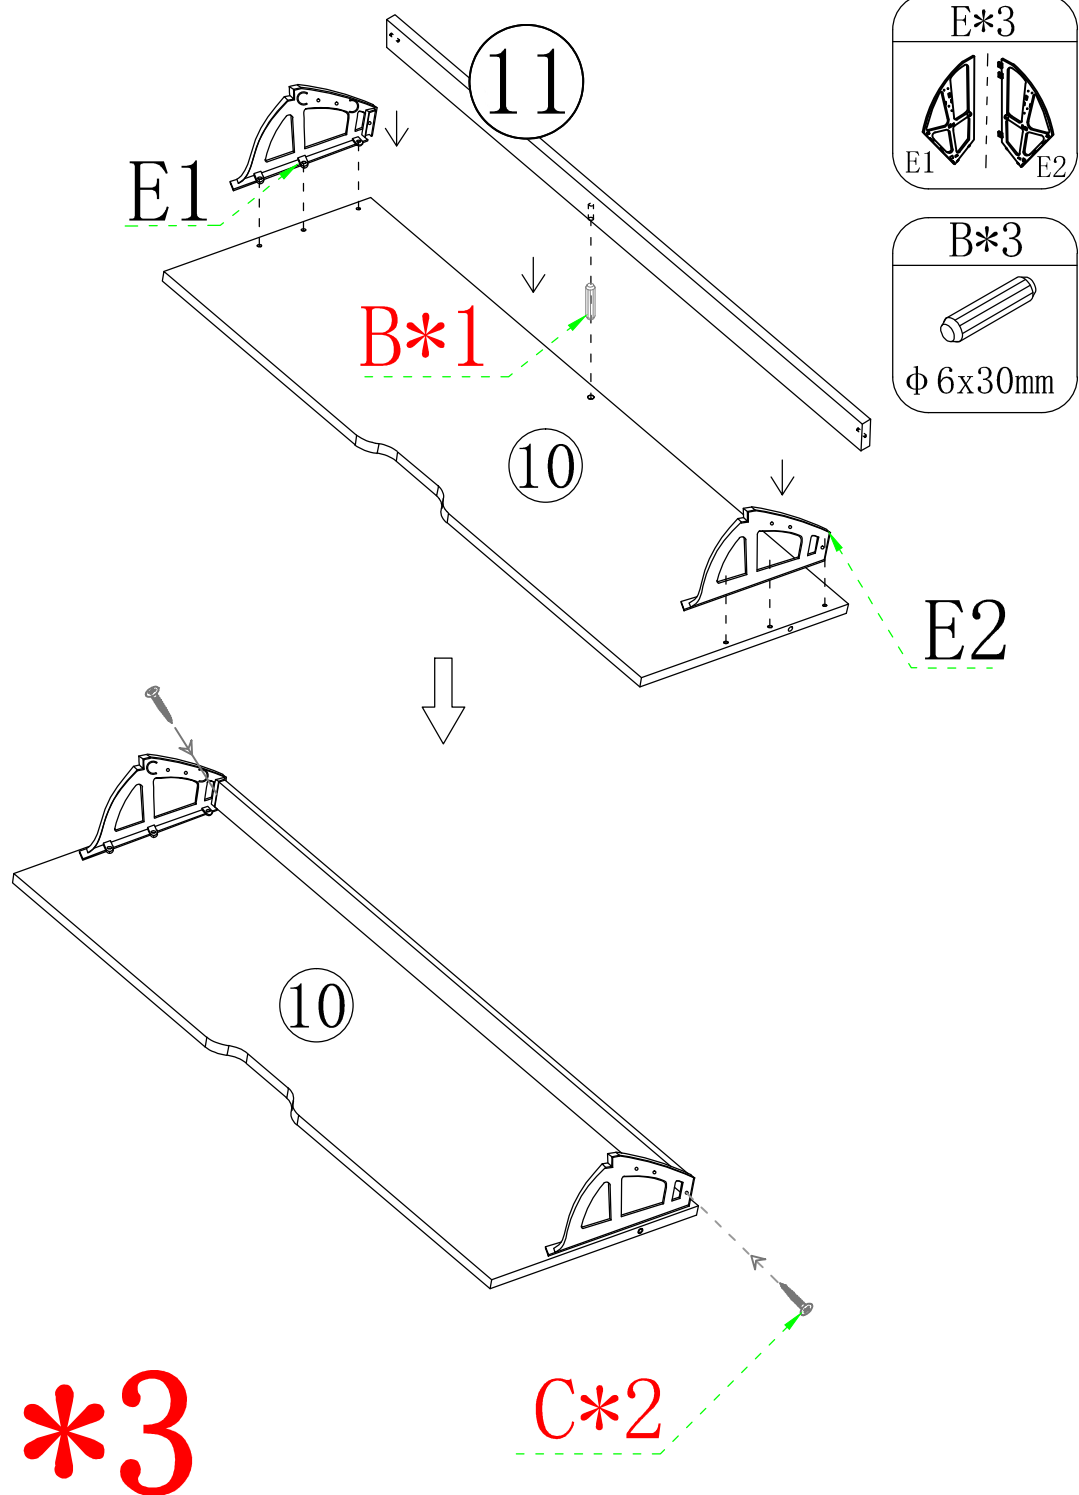


Step10


C*30



Φ 3.5x20mm

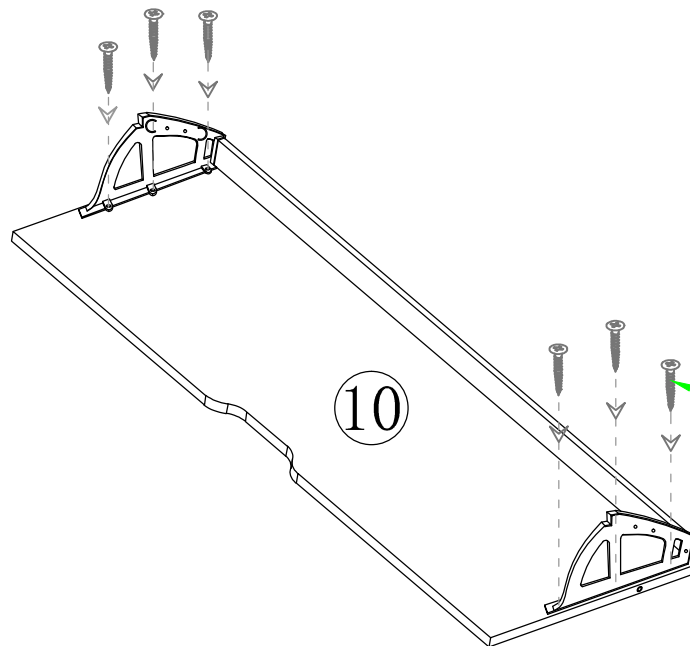

C*6

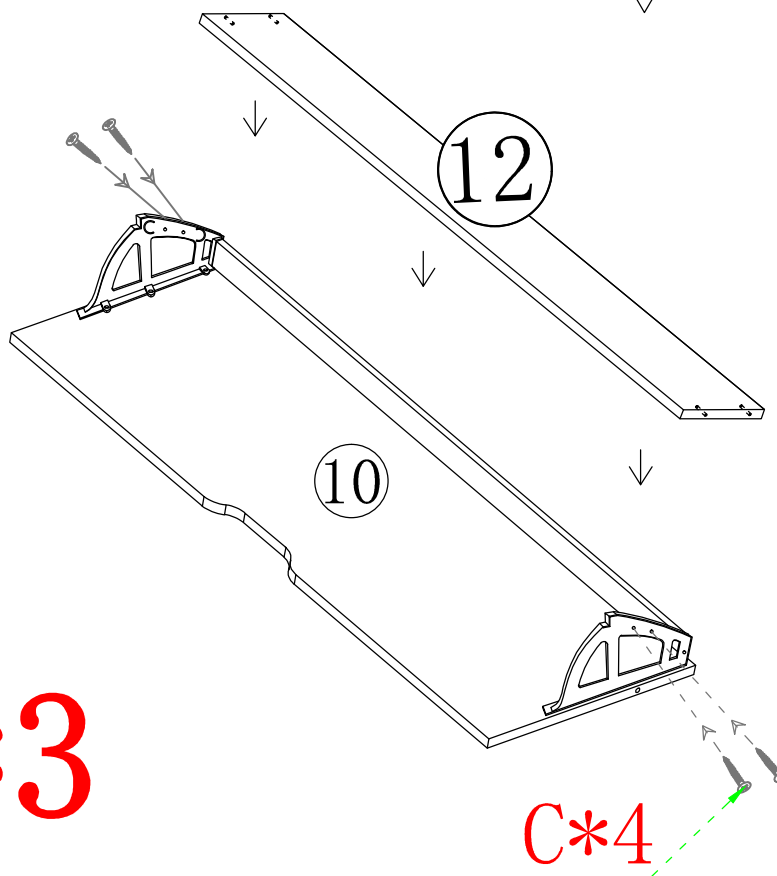


*3





C*4

Step11






*3

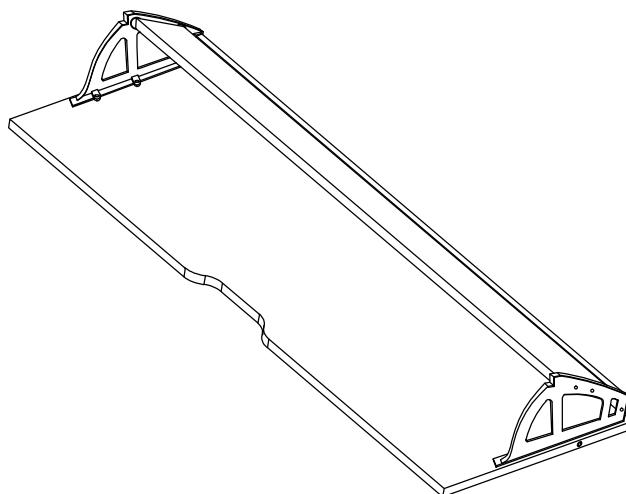

Step12

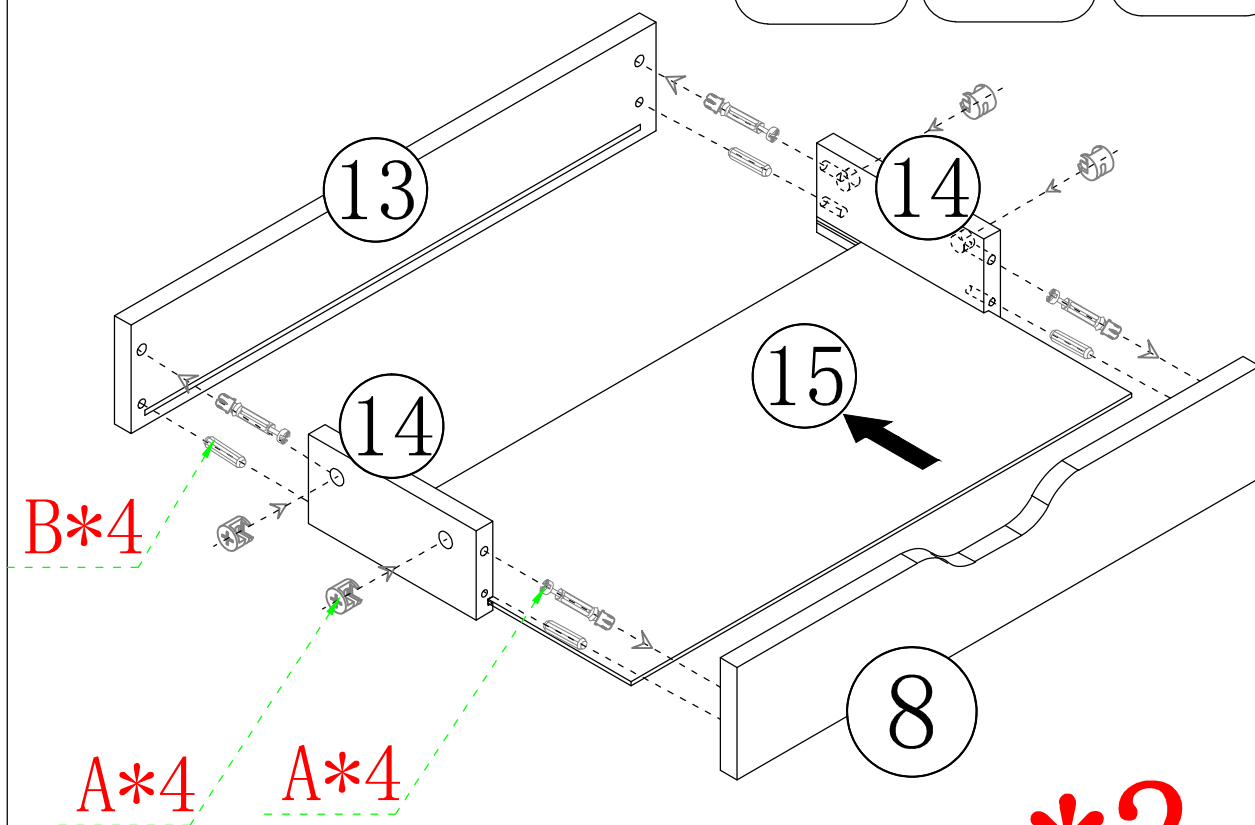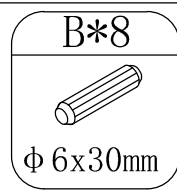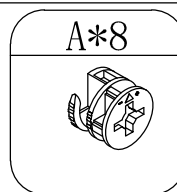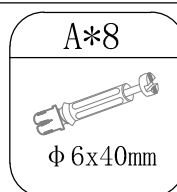

*2

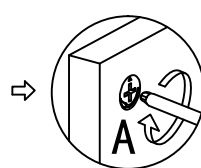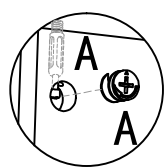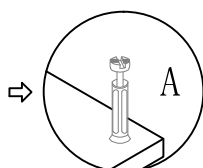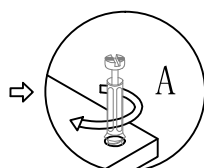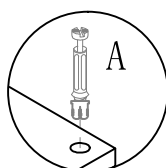


Step13


H*18





D*4



H*18


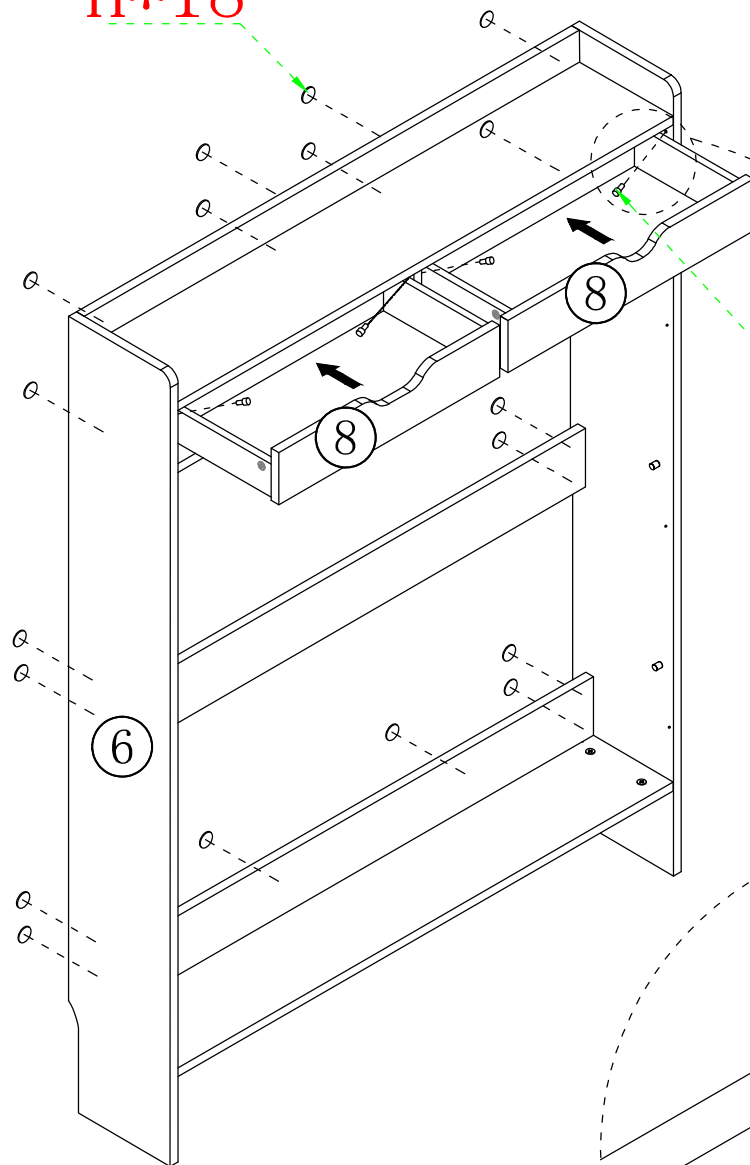


D*4

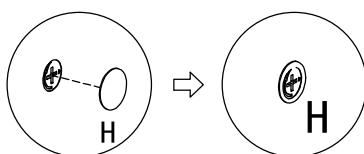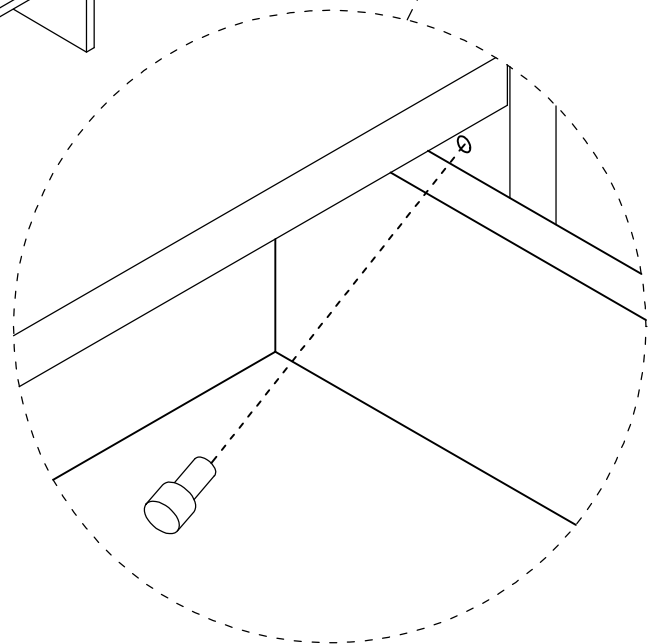


Step14

G*6

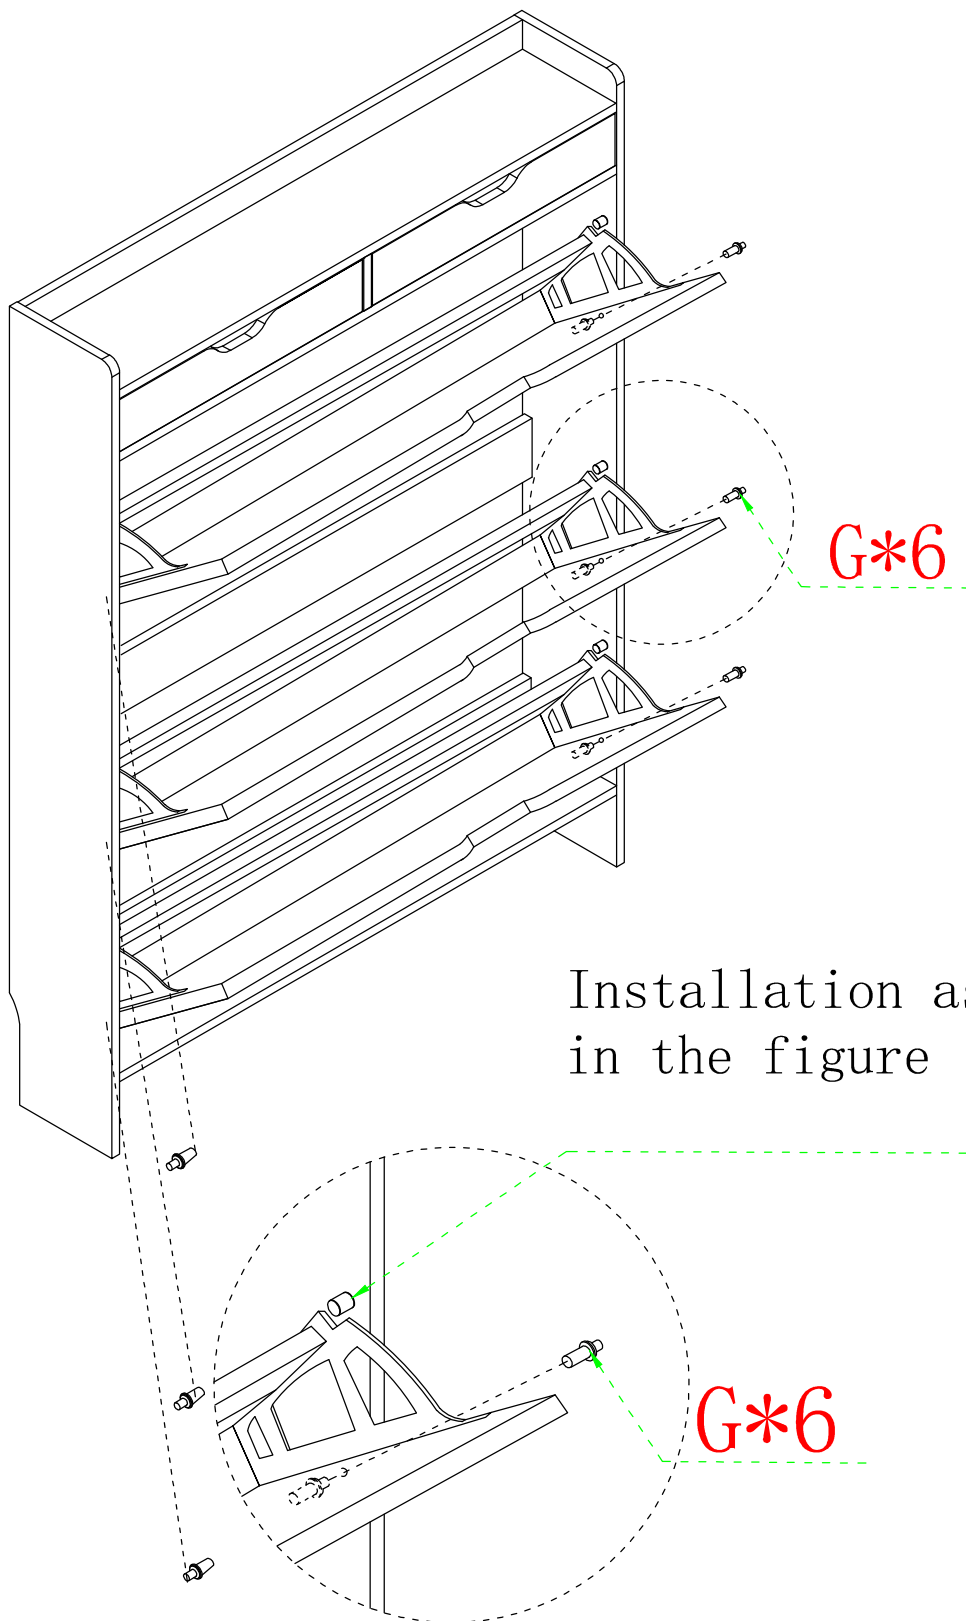

Installation as shown
in the figure

Step15

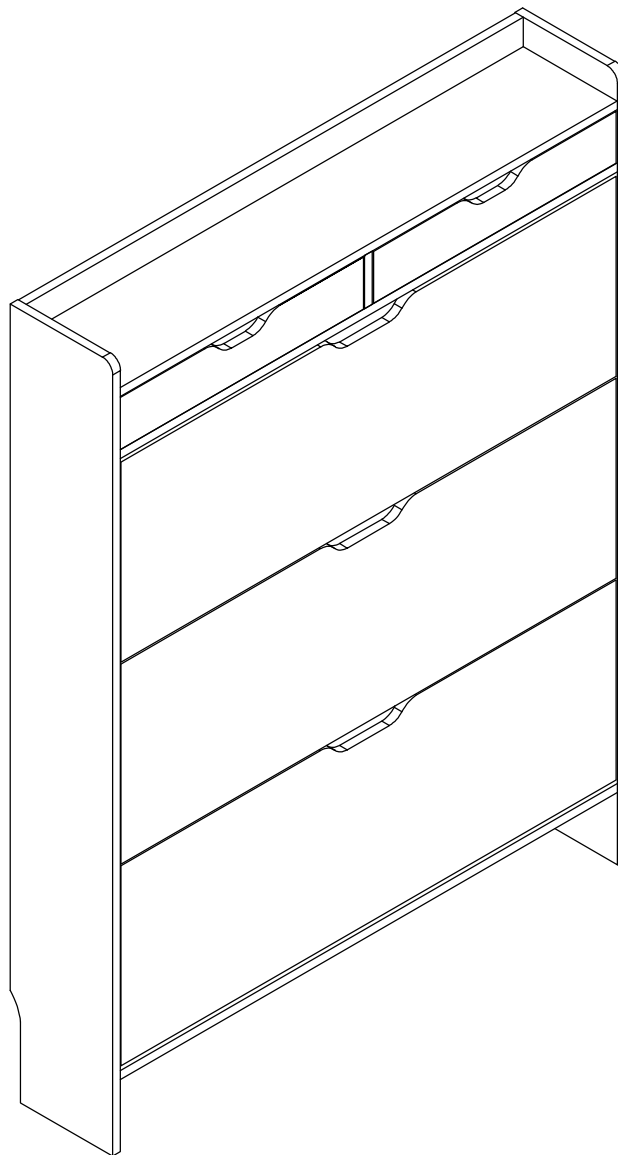

installation is complete